

VIII. Ink Fountain Maintenance

1. Loosen spring "A" in the key with screwdriver (figure 1).
2. Remove the key - one at a time! (figure 2).

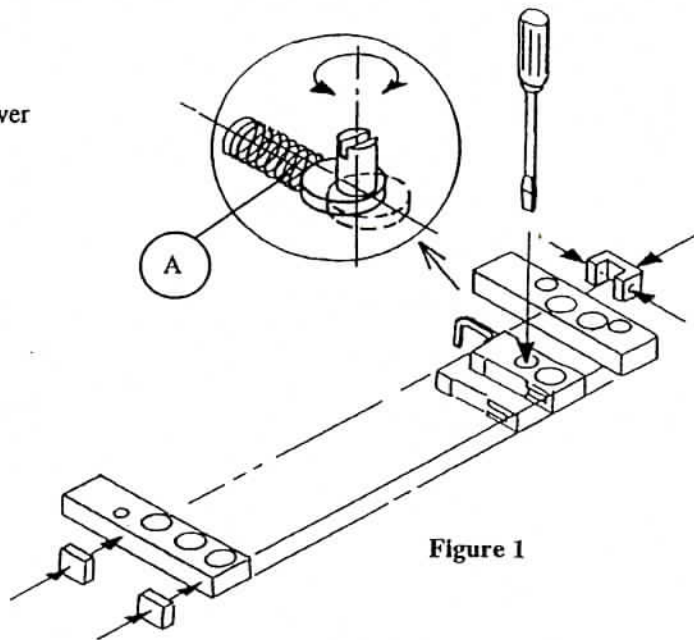


Figure 1



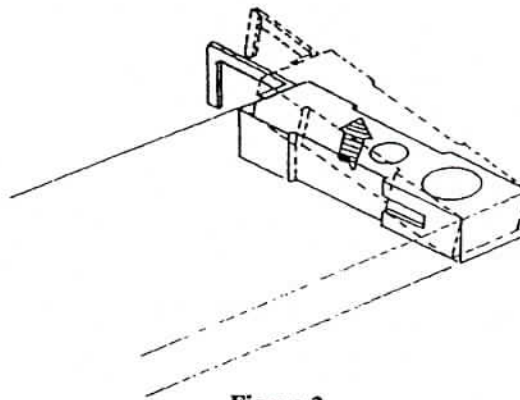



Figure 2

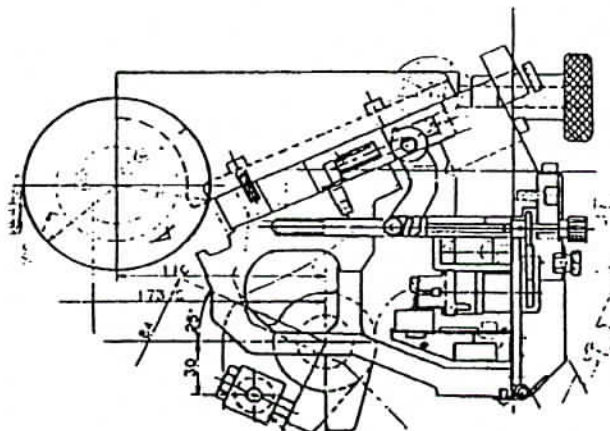

Ink Fountain Maintenance

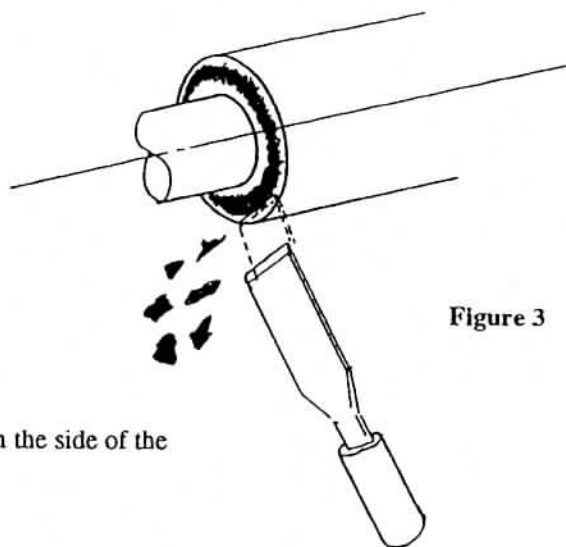


3. Clean fountain roller. Remove and clean dried ink from the side of the fountain ball (figure 3).
4. Apply grease to both side of each key (figure 4).
5. Reinstall ink keys (figure 5).

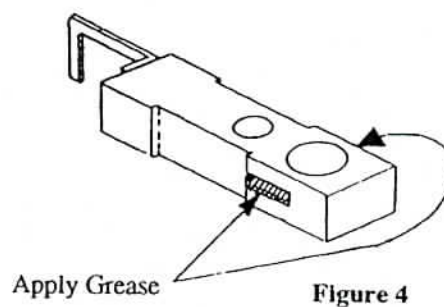

BEWARE:

Be careful not to damage these edges!

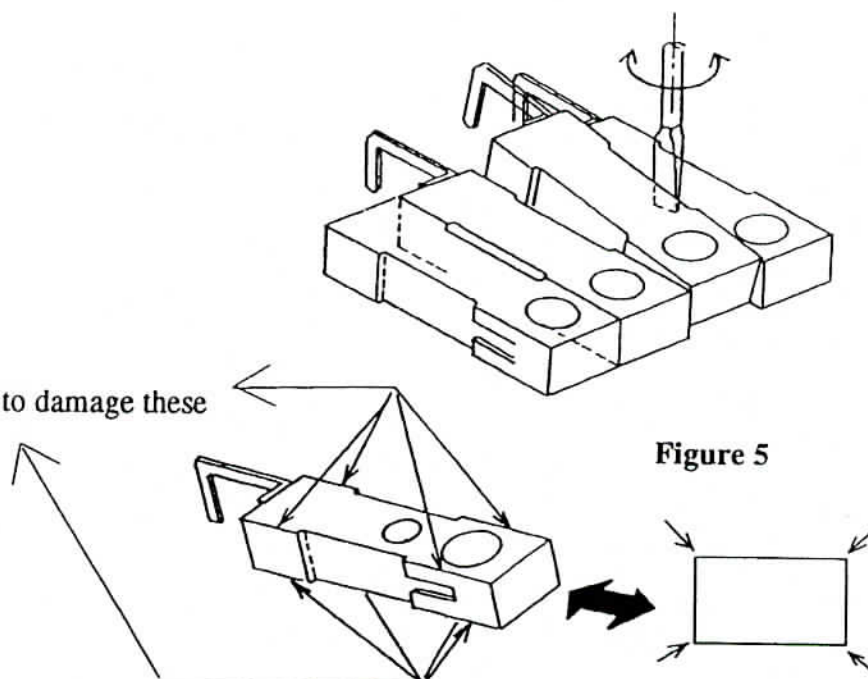

Ink Fountain Maintenance

6. Reinstall cheek "B". Insure that gap between fountain ball and cheek is less than 0.02mm (figure 6).
7. Make sure ink fountain closes smoothly - so that the cheek does not touch the fountain ball (figure 7).

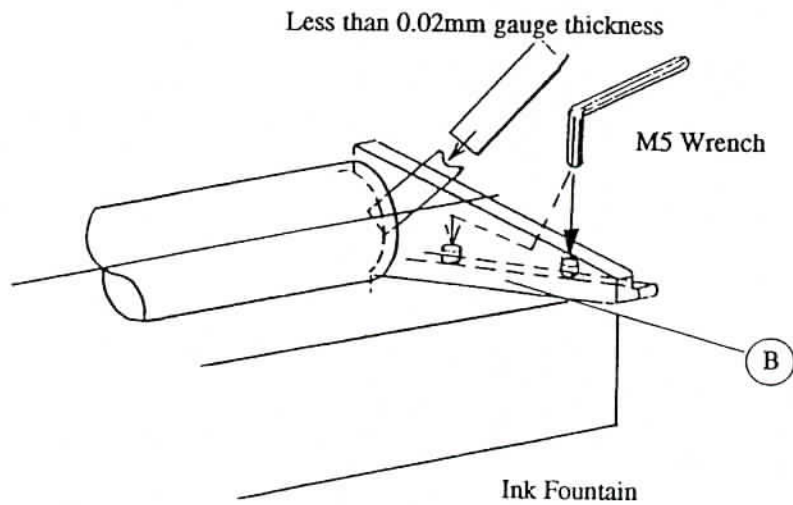


Figure 6

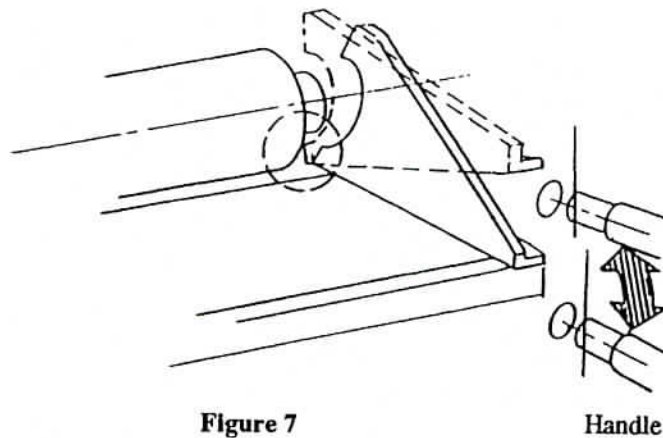


Figure 7